## ROOF CURB ASSEMBLY INSTRUCTIONS


AAON

CAMBRIDGEPORT 1003850

PART NUMBER

**AAON UNITS** 

CABINET C

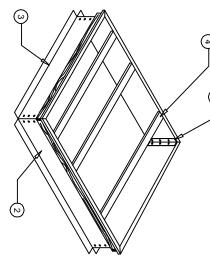

## **PARTS LIST**


13 5/8 --

4 22 3/4 →

A-22 1/4-V

94 1/8

- **CORNER BRACKET (QTY.4)** END RAILS (QTY.2)
- $\Theta \Theta \overline{\Theta}$ SIDE RAILS (QTY.2)
  - (4) DUCT SUPPORT (QTY. 3)
- (5) HARDWARE BAG (QTY.1) (12) 10-16 x 3/4" TEK SCREWS (16 NUTS & BOLTS 40 FT. 1-1/4" x 1/4" GASKET

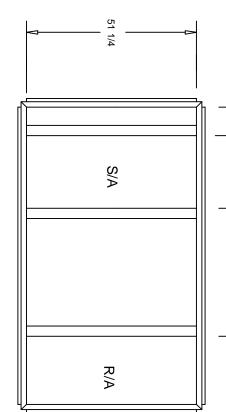

TYPICAL INSTALLED CURB SECTION

1"x4" WOOD NAILER (BY C.A.S.)

ROOFING FELT (FIELD SUPPLIED)

COUNTER FLASHING (FIELD SUPPLIED)

- CANT STRIP (FIELD SUPPLIED)

GASKET (BY C.A.S.)

RIGID INSULATION (FIELD SUPPLIED)

SEE REVERSE SIDE FOR STEP-BY-STEP ASSEMBLY INSTRUCTIONS.

PHONE 1-800-648-2872 CAMBRIDGEPORT AIR SYSTEMS, INC SALISBURY, MA 01952 FAX 978-462-9189

DATE:07-11-01 REV:00